


14. Installation notice

Please follow the table before installation

| Motor | Voltage | Power | Clockwise | Counter clockwise | Capacitor | Order |
|-------|-------------|-------|-----------|-------------------|-----------|-------|
| #4208 | 110V ~ 220V | Black | | | #4208J | |
| #4807 | 110V ~ 220V | Black | | | #4807J | |
| #6007 | 110V ~ 220V | Black | | | #6007J | |
| #9016 | 24V AC | White | | | #9016J | |
| #1415 | 24V AC | White | | | #1415J | |

For each 110V/24V motor, one capacitor is needed. For 220V, two capacitors are needed.

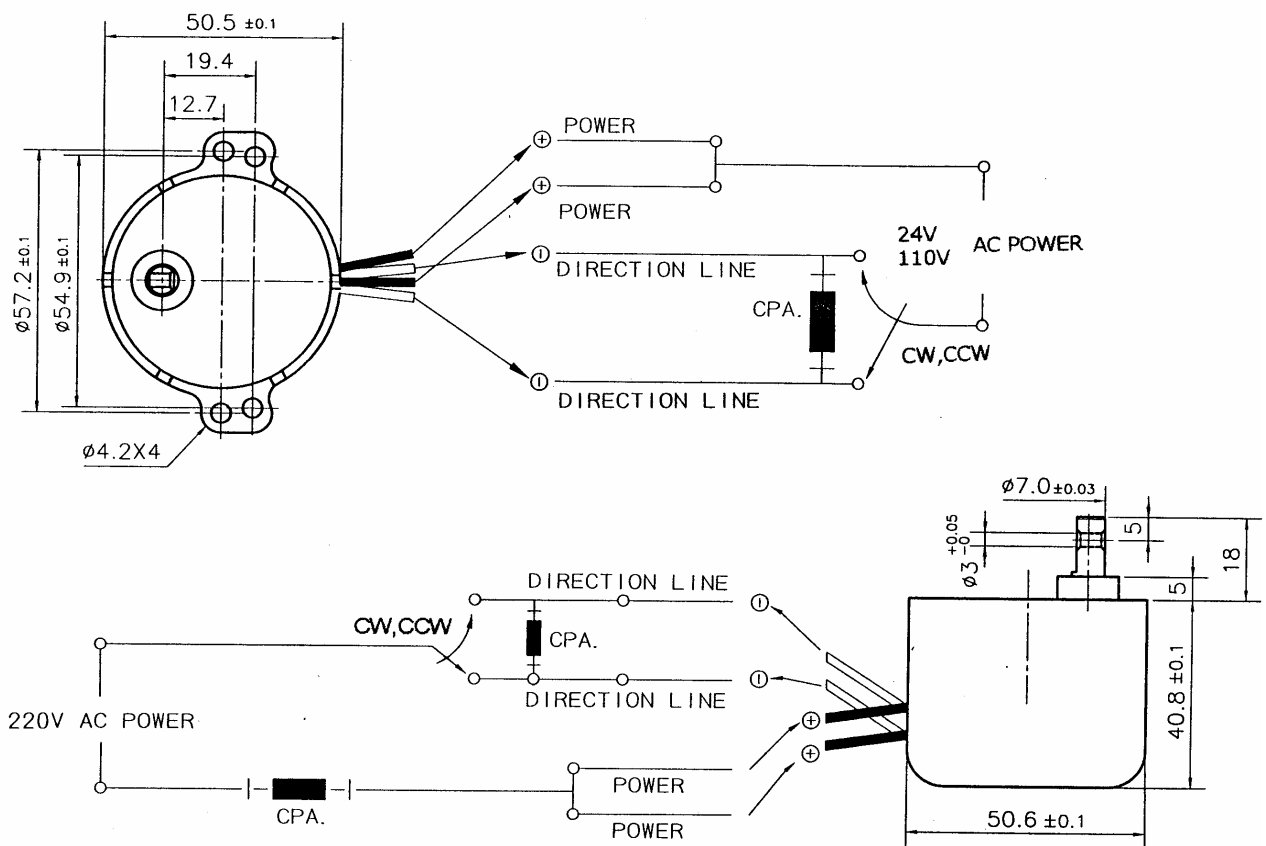

After installation, please operate the motor without any load. If the motor torque without loading is same as the values we listed, it means that the motor is installed correctly.